

Q1: Does message repeat when it finishes?

A1: There are many playback settings that can be selected. The options are as follows:

- 1) One Shot, Re-triggerable - Plays segment until another button is pressed, then plays that segment. If nothing is on other segment, message stops. Message starts over and plays until end of message if same button is pressed again during playback (same button does not stop playback, but a button on an empty segment would).
- 2) One Shot Non-Re-triggerable - Plays entire file even if you push the same button during playback. If you press another button, it will stop the currently playing segment and play the entire new file (unless another button is pressed, in which case that file plays entirely). If you press a button with nothing recorded on the segment, playback stops currently playing message.
- 3) Level Hold, Play 1 cycle - Only plays as long as button is pressed down. Message will stop after one complete play or when button is released or if another button is selected. If another button is selected, message plays as long as button is pressed - one complete time.
- 4) Level Hold play repeat - Same as 3) except message loops until button is released.
- 5) One Shot, Re-triggerable, repeat - This one is dangerous! Message loops until another segment's button is pressed, then that segment will loop continuously unless you select a different trigger function (which you can do in the program). Yes, you can select a different playback function FOR EACH BUTTON.
- 6) Toggle On/Off - Playback stops when same button is pressed. Message will start from beginning when same button is pressed a third time. Also, if another button is pressed while first segment is playing, the new segment will play once through unless you press it's button again which makes it stop playing.

Q2: If the sensor is triggered repeatedly, will the message repeat?

A2: Yes & No. This all depends on the playback option you have selected and whether or not you have several messages recorded to the device.

Q3: What happens if the sensor is activated again during playback of message?

A3: This also depends on the playback option you have selected. See Q1. Some modes stop the message and some start it over.

Q4: Do all the recordings get erased when the batteries are removed?

A4: No; it is non-volatile memory. Removal of the batteries will not erase the recordings.

Q5: How can I make this unit sound better?

A5: You can hold the speaker in your hand by making an "O" shape with your finger and thumb with the speaker held firmly inside the "O." Or you can mount the speaker in a box or to something heavier than the speaker (like plywood with a hole in it for the speaker). This decreases the speaker frame vibration and increases the speaker surface vibration which improves the sound quality.

Q6: How can I make this unit louder?

A6: You could get any of our amplifiers or amplifier kits to use with this unit - or use the 1/8" line out to plug into a set of powered speakers or amplifier.

Q7: How do I record 300 seconds at 16k?

A7: Unfortunately the unit can only record 300 seconds at 4.7k. It can record approximately 50 seconds at 16k.

Q8: Should I use the 8bit mono unsigned or 16 bit mono signed?

A8: Either one is fine. They will both work and it shouldn't make much difference.

Q9: What are the "Groups" in the software and how do I use them?

A9: The groups are very powerful and make this product very much more ubiquitous. If you want to use the same button to trigger different messages (up to 100 per button), use the groups function. How? When you are programming a key with .wav files, click on "2" in the "Group" column on the left of the software window. Now on line 1 under the "No." column, program your next .wav file. (NOTE: You can stack up to 200 .wav files in each group. These files will play consecutively when the group is triggered, back-to-back nonstop.) Go on to group 3 and continue programming as many messages as you like (within the 300 seconds). Now when you press that key, it will play group one. The next time you press the same Key, it will play group 2, and so on.