


AXE Microprocess AC MULTI-POWER METER(1 2W)

MMX-P1 series

■Features

Accept CURRENT, VOLTAGE, WATT, VAR,POWER FACTOR, FERQUENCY SIGNALS. Accuracy 0.25% F.S.±1 digit WATT unit can set to KW or W CURRENT and WATT Decimal point can be set CT RATIO can be set 1~999 Display FERQUENCY, VOLTAGE, CURRENT, (WATT or VAR or PF) at the same time	Modified inside parameter ,must have pass code RS485 interface, MODBUS RTU MODE BAUD RATE:19200/9600/4800/2400 0.56" highlight display VOLTAGE,CURRENT,WATT are TRMS(USE IC:4200) EEPROM Saving ,data safekeeping about 10 year
---	--

■Name Of Parts

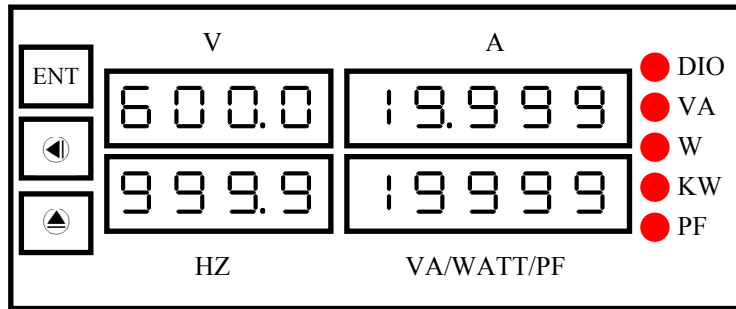

■Alarm Function Diagram

- 1.Maximum current input:50A
- 2.Maximum voltage input:600V
- 3.Maximum watt input:30.00KW(10A*600V,PF=1)
- 4.Current display: input value*CTR*DP-A(MSB:x1000,2SB:x100,3SB:x10,LSB:x1)(display range 0~19999)
- 5.Voltage display: input value*10(fix decimal point)(display range 0~600.0)
- 6.Watt display:[input value*CTR*DPW(MSB:x1000,2SB:x100,3SB:x10,LSB:x1)]/UNIT(KW:1000,W:1)(display range 0~19999)

Key introduce	Operation Manual
Ⓜ key function	1.In normal display, The key function is call out setting group 2.In parameter setting page, The key function is data ENTER, and goto next page
⏪ key function	1.In normal display, The key function is call out alarm value setting page 2.Into parameter setting page, the parameter mark&data is alternate display, If need modify data can press shift key into setting procedure, The display is lock parameter data, this time must let off key about 0.2 sec ,press again, the cursor (twinkle express)is cycle moving left.(Key response about 0.2 sec.)
⏩ key function	In normal display, The key function is call out adjustment rate display page (DZERO&DSPAN) 2.Into parameter setting page, the parameter mark&data is alternate display, If need modify data can press shift key into setting procedure, The display is lock parameter data, this time must let off key about 0.2 sec ,press again, the parameter data will increment .(Key response about 0.2 sec.)
⏪&⏩ key function	In setting group or setting page press ⏪&⏩ key return normal display, but if in setting page the modify data will be lost
No key in anything	In setting group or setting page no key in anything about 2 minutes, return normal display, but if in setting page the modify data will be lost

Step	Parameter Mark Description	Parameter Mark	Operation Manual
1	Normal display	1 2 3 4 1 2 3 4	Press Ⓜ/FUNC key into P.COD setting page
2	P.COD(Pass Code input page)	0 0 0 0 0 P . C o d	1.Key in 5 digit pass code with ⏪ & ⏩ key 2.Press Ⓜ key, the pass code is right into setting group, otherwise return normal display
3	SYS(System setting group)	S Y S	3.Select setting group with ⏪ key 4.Press Ⓜ key into setting page of selection setting group
	ADJ(Display adjust setting group)	A d j	

	DOP(Communication setting group)	d o P	
4	SYS(System setting group)	S Y S	Press key decide SYS setting group , press key into VOL.(V Range) setting page
4-1	VOL.(V Range) Default 300V	V O L 3 0 0 V	1.Decide VOL.(V Range) with key (300V/600V) 2. Press key enter DP-A(DP Current) setting page
4-2	DP-A(DP Current) Default 0	d P - A 0	1. Decide DP-A(DP Current) with key (0~4) 2. Press key enter AMP.(A Range) setting page
4-3	AMP.(A Range) Default 5A	A M P 5 A	1. Decide AMP.(A Range) with key (5A/50A) 2. Press key enter CTR(C.T Rate) setting page
4-4	CTR(C.T Rate) Default 1	C T R 1	1. Decide CTR(C.T Rate) with & (1~999) 2. Press key enter UNIT setting page
4-5	UNIT(Watt Unit) Default KW	U N I T K W	1. Decide UNIT with (W/KW) 2. Press key enter DP-W(Decimal Point Watt) setting page
4-6	DP-W(Decimal Point Watt) Default 0	d P - W 0	1. Decide DP-W(Decimal Point Watt) with (0~4) 2. Press key enter VCUT (Voltage Low Cut) setting page
4-7	VCUT (Voltage Low Cut) Default 0	V C U T 0 0 0 0 0	1. Decide VCUT (Voltage Low Cut) with & (0~99) 2. Press key ACUT (Current Low Cut) setting page if LCUT = 0 function disable
4-8	ACUT (Current Low Cut) Default 0	A C U T 0 0 0 0 0	1. Decide ACUT (Current Low Cut) with & (0~99) 2. Press key enter WCUT (Watt Low Cut) setting page if LCUT = 0 function disable
4-9	WCUT (Watt Low Cut) Default 0	W C U T 0 0 0 0 0	1. Decide WCUT (Watt Low Cut) with & (0~99) 2. Press key enter AVG (Average) setting page if LCUT = 0 function disable
4-10	AVG (Average) Default 1	A V G 0 0 0 0 1	1. Decide AVG (Average) with & (1~99) 2. Press key enter CODE(Code) setting page
4-11	CODE(Code) Default 0	C o d e 0 0 0 0 0	1. Decide CODE(Code) with & (0~19999) 2. Press key return SYS setting group
5	Display adjust setting page	A d j	Decide setting page with key, Press into VZER(Voltage Display Zero Adjust)
5-1	VZER(Voltage Display Zero Adjust) Default 0	V Z E R 0 0 0 0 0	1. Decide VZER(Voltage Display Zero Adjust) with & 2. Press key enter VSPA(Voltage Display Span Adjust) setting page
5-2	VSPA(Voltage Display Span Adjust) Default 0	V S P A 0 0 0 0 0	1. Decide VZER(Voltage Display Span Adjust) with & 2. Press key enter AZER(Current Display Zero Adjust) setting page
5-3	AZER(Current Display Zero Adjust) Default 0	A Z E R 0 0 0 0 0	1. Decide AZER(Current Display Zero Adjust) with & 2. Press key enter ASPA(Current Display Span Adjust) setting page
5-4	ASPA(Current Display Span Adjust) Default 0	A S P A 0 0 0 0 0	1. Decide ASPA(Current Display Span Adjust) with & 2. Press key enter WZER(Watt Display Zero Adjust) setting page
5-5	WZER(Watt Display Zero Adjust) Default 0	W Z E R 0 0 0 0 0	1. Decide WZER(Watt Display Zero Adjust) with & 2. Press key enter WSPA(Watt Display Span Adjust) setting page
5-6	WSPA(Watt Display Span Adjust) Default 0	W S P A 0 0 0 0 0	1. Decide WSPA(Watt Display Span Adjust) with & 2. Press key return ADJ setting group

7	DOP(Communication setting group)	d o p	Press◀key decide DOP setting group, pressⓂkey into ADDR setting page
7-1	ADDR(Communication Address setting page) Default=0	A d d r	1.Decide Communication address with◀&▶key(0~255) 2.PressⓂkey enter data and into BAUD setting page
		0 0 0 0 0	
7-2	BAUD(Communication Baud Rate setting page) Default=19200	b A U D	1.Decide baud rate with▶key(19200,9600,4800,2400) 2.PressⓂkey enter data and into PARI setting page
		1 9 2 0 0	
7-3	PARI(Communication Parity Check setting page) Default=n82	P A R I	1.Decide parity check with▶key(n82,n81,even,odd) 2.PressⓂkey enter data and return DOP setting group *if Parity check setting is non , sometime STOP BIT must set 2 BIT
		n . 8 . 2	
Appendix	Error Mark Description	Error Mark	Analyze & Description
1	Input over error detect	i o F L	Input signal over range(120%)
2	Display over error detect	d o F L	Display over range(19999)
3	A/D Converter error detect	A d E r	1. Input signal over range(180%) 2. Inside circuit damage Please moving input signal if still display ADER, please contact us
4	EEPROM error detect	n o	1. External interference when EEPROM read/write 2. EEPROM write over 100 million times(guarantee 10 years) Please power reset, if still display E-00,doing following step: 1. E-00 & No alternate display for inquire reset EEPROM 2. Decide Yes with▶or◀key, pressⓂkey return normal display EEPROM was reset, Please follow step 1~10 set again
		E - 0 0	
		Y E S	
		E - 0 0	
		n o	
		Y E S	

MMX-P1 Modbus RTU Mode Protocol Address Map

Data format 16Bit, 8000~7FFF(-32768~32767)

Address	名稱	説明	動作
0000	DP-A	Current decimal point position, range 00~04(0~4) 0:10 ⁰ ,1:10 ⁻¹ ,2:10 ⁻² ,3:10 ⁻³ ,4:10 ⁻⁴	R/W
	DP-W	Watt decimal point position, range 00~04(0~4) 0:10 ⁰ ,1:10 ⁻¹ ,2:10 ⁻² ,3:10 ⁻³ ,4:10 ⁻⁴	R/W
0002	VOL.	Voltage input range, 00~01(0:300V,1:600V)	R/W
	AMP.	Current input range, 00~01(0:5A,1:50A)	R/W
0004	UNIT	Display watt range, 00~01(0:KW,1:W)	R/W
	STATUS	LED indicate status, BIT0:DIO,BIT3:KW,BIT4:W,BIT5:VA,BIT6:PF	R/W
0006	VCUT	Voltage Low cut, range 00~63(0~99)	R/W
	ACUT	Current Low cut, range 00~63(0~99)	R/W
0008	WCUT	Watt Low cut, range 00~63(0~99)	R/W
	AVG	Display Average time, input range 01~63(1~99)	R/W
000A	BAUD	Baud rate, input range 00~03(0~3)0:19200,1:9600,2:4800,3:2400	R/W
	PARI	Parity, input range 00~03(0~3)0:N82,1:N81,2:EVEN,3:ODD	R/W
000C	CTR	Current transformer rate, input range 0001~03E7(1~999)	R/W
000E	CODE	Pass code, input range 0000~4E1F(0~19999)	R/W
0010	ADDR	Communication address, input range 0000~00FF(0~255)	R/W
0012	IL-V	Minimum Voltage calibrate, input range 029F16~4EA4A8(171798~5153960)	R
0015	IL-A	Minimum Current calibrate, input range 029F16~4EA4A8(171798~5153960)	R
0018	IL-W	Minimum Watt calibrate, input range 029F16~4EA4A8(171798~5153960)	R
001B	IH-V	Maximum Voltage calibrate, input range 029F16~4EA4A8(171798~5153960)	R
001E	IH-A	Maximum Current calibrate, input range 029F16~4EA4A8(171798~5153960)	R
0021	IH-W	Maximum Watt calibrate, input range 029F16~4EA4A8(171798~5153960)	R
0024	DISP-F	Frequency display value, range 0000~270F(0~9999)	R
0026	DISP-V	Voltage display value, range 0000~270F(0~9999)	R
0028	DISP-A	Current display value, range 0000~4E1F(0~19999)	R
002A	DISP-W	Watt(VAR,PF) display value, range 0000~4E1F(0~19999)	R